


Remote control button mapping for SL1/2/3/4/5

Depending on the selected operating mode (TV/Video/Audio/Photo/Apps) and function (e.g. DR+, EPG, PIP, Teletext, HbbTV, etc.), the key assignment may differ from the assignment described here (see the corresponding chapter)

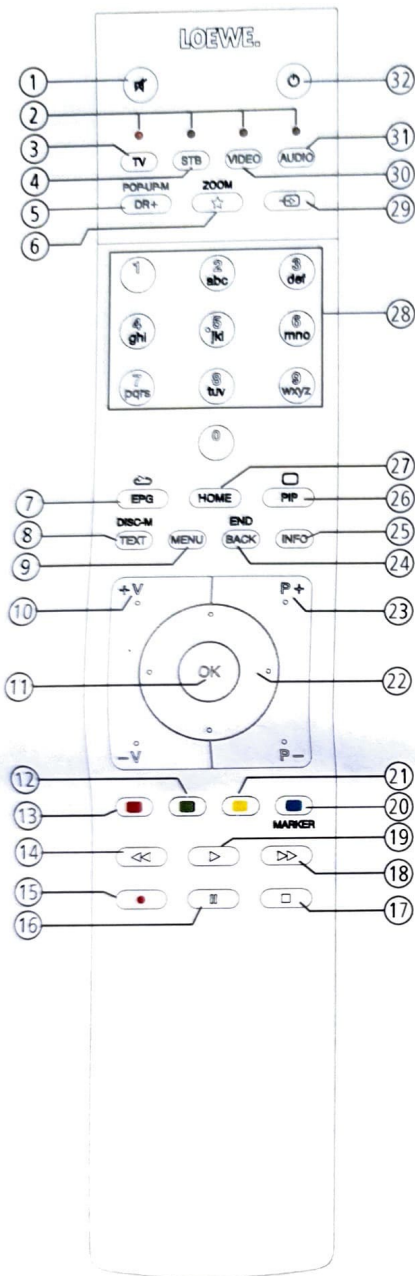

- ① Sound mute/on
- ② LED display for currently operated device
- ③ Call up the TV mode
- ④ Reassign remote control to Set-Top Box⁽¹⁾ (presetting: Apple TV)
- ⑤ Pressing briefly: Open the DR+ archive
Pressing longer: Call up timer
- ⑥ Pressing briefly: Add current object to Home favourites
Pressing longer: Call up App Gallery or Mimi DefinedTM⁽¹⁾⁽⁴⁾
- ⑦ EPG (Electronic Program Guide) on/off
- ⑧ Teletext/MediaText⁽²⁾ on/off
- ⑨ Pressing briefly: Call up menu options for the active operating mode
Pressing longer: Call up System settings
- ⑩ **V+ / V-**: increase/reduce volume
- ⑪ Pressing briefly: Call up channel list.
Pressing longer: Call up expanded channel list.
In the menu: confirm/call up
- ⑫ Green coloured key: screen on/off in Audio/Radio mode
- ⑬ Red coloured key: call up preferred value-added network service, if available⁽²⁾
- ⑭ Pressing briefly: skip backwards.
Pressing longer: winding backwards
- ⑮ Pressing briefly: direct recording (with determination of recording duration)⁽³⁾
Pressing longer: One Touch Recording⁽³⁾
- ⑯ Pause / Start/pause the timeshift television⁽³⁾
- ⑰ Stop / End timeshift (return to live image)⁽³⁾
- ⑱ Pressing briefly: skip forwards
Pressing longer: winding forwards
- ⑲ Play / Start/continue timeshift television⁽³⁾
- ⑳ Blue coloured key: call up channel menu options (selection of language/sound, subtitles or channel/video track)
- ㉑ Pressing briefly: Yellow coloured key: call up history.
Pressing longer: Yellow coloured key: call up last channel.
- ㉒ **◀ ▶ ▲ ▼**: Navigation on the user interface, select objects
In the menu / lists: select/set
- ㉓ **P+ / P-**: next/previous channel
- ㉔ Pressing briefly: step / level back.
Pressing long: close all displays
- ㉕ Press briefly during an on-screen display: info display. Info text appropriate to the content that can assist you further, should you have any questions about your TV set.
Press briefly, without on-screen display: access status display. With status display open and repeatedly pressing the key call the detailed information on the broadcast.
Press longer: show Explanation of keys
- ㉖ PIP (picture in picture) on/off
- ㉗ Call up the Home view
- ㉘ Select channels with numeric keys directly
In the menu: enter numbers or letters
- ㉙ Call up Sources
- ㉚ Reassign remote control to video device⁽¹⁾ (presetting: BuTech VIs on 3D)
- ㉛ Call up radio mode (standard assignment)⁽¹⁾
- ㉜ Switches the TV set on (mains switch must be turned on) or switches to standby mode.
Press briefly while TV set is switched on: TV set and all CEC-enabled devices connected to the HDMI ports will be switched off to standby (System standby)

⁽¹⁾ The assignment of these keys can be changed. The description refers to the standard setting. The factory setting of the keys can vary depending on the firmware version of the remote control.

⁽²⁾ Depending on the settings: HbbTV mode on/off, start behaviour of HbbTV channel. (**System Settings** → **Control** → **more ...** → **HbbTV**)

⁽³⁾ Depending on the set type, on an externally connected USB hard drive or the hard drive installed in the TV set (see chapter **Technical data - equipment features** for your TV set)

⁽⁴⁾ Default assignment for the long key press: Mimi-Defined[®] on/off (Mimi-Defined[®] is activated on the TV set), otherwise call up App Gallery

Einzelne Tastenfunktion löschen

Sie können die angelernte Funktion einer einzelnen Taste löschen

■ Die Gerätetaste **STB** muss mit dem Tastencode 18 programmiert sein.



Taste **STB** und gleichzeitig **grüne Taste** fünf Sekunden lang drücken. Die LED über der Taste **STB** leuchtet dauerhaft.



Zu löschende Taste auf der TV-Fernbedienung drücken.

Die LED über der Taste **STB** blinkt zweimal.

Fahren Sie mit dem Löschen weiterer Tasten wie oben beschrieben fort.



Zum Beenden des Löschmodus drücken Sie die Taste **STB** erneut.

Die LED über der Taste **STB** blinkt einmal.

Alle Tastenfunktionen einer Gerätetaste löschen

Sie können alle angelernten Funktionen löschen, die Sie auf der Taste **STB** eingestellt haben.

■ Die Gerätetaste **STB** muss mit dem Tastencode 18 programmiert sein.



Taste **STB** und gleichzeitig **gelbe Taste** fünf Sekunden lang drücken. Die LED über der Taste **STB** blinkt zweimal.

Alle Tastenfunktionen aller Gerätetasten löschen

Sie können alle angelernten Funktionen löschen, die Sie auf den Gerätetasten **TV**, **STB**, **VIDEO** oder **AUDIO** eingestellt haben.

■ Die Gerätetaste **STB** muss mit dem Tastencode 18 programmiert sein.



Taste **STB** und gleichzeitig **blaue Taste** fünf Sekunden lang drücken. Die LEDs über den Gerätetasten blinken zweimal.

Setting the remote control

Using the remote control for the TV mode of the TV set

TV Press the **TV key**, the LED above it will light for approx 5 seconds

Using the remote control for a Loewe recorder

STB Press the **STB key**, the LED above it will light for approx 5 seconds

Using the remote control for a Loewe player

VIDEO Press the **VIDEO key**, the LED above it will light for approx 5 seconds

Using the remote control for the radio mode of the TV set

AUDIO Press the **AUDIO key**, the display above it will light for approx 5 seconds

As long as a key is pressed, the LED for the selected operating mode lights up (**TV - STB - VIDEO - AUDIO**). This allows you to check which operating mode the remote control is set to every time you press a button.

The **factory setting** of the keys is described above (see also table in right hand column). The assignment of the buttons can be changed to suit the existing accessory devices (see right hand column).

Set unit for sound control function on the remote control

The keys for the sound control functions Volume (Ⓜ) and Sound on/off (Ⓛ) are programmed ex-factory to interact with the TV set. The unit to be operated can be modified.

■ The device must **first** be placed on one of the device key of the remote control (see right column) before the tone-control functions can be changed to the appropriate device.

TV **3 def** Press the **TV key** and the numerical key simultaneously for minimum 5 seconds. The LED above the selected **TV key** flashes twice

Function	Buttons	Unit
Audio Functions	TV + 3	Auro/AudioVision/MediaVision 3D
	TV + 4	Mediacenter
	TV + 5	Loewe TV
	TV + 6	Loewe TV with sound projector without system connection

Set Loewe TV mode

Function	Tasten	Loewe TV chassis
Loewe TV mode	TV + 7 (= standard)	SL1/2/3/4/5
	TV + 9	SL7

Setting the remote control for other Loewe devices

You can operate various Loewe devices with the remote control. The device keys **STB - VIDEO - AUDIO** can be reassigned to operate different Loewe devices.

STB ■ Press the required device key and the **STOP key** simultaneously for 5 sec until the corresponding LED display flashes twice

Then enter the two digit device code from the list below. The corresponding LED indicator light flashes twice





 




Unit	Code	Factory setting
Loewe ViewVision 8106 H	10	
Loewe Viewvision, Centros 21x2	12	
Loewe ViewVision DR+ DVB-T	13	
Loewe Auro 2216 PS/8116 DT	14	
Loewe BluTech Vision Interactive	15	
Loewe Sound Projector	17	
Set-Top-Box (STB) data base	18	
Loewe TV - Digital radio	19	Audio
Loewe Mediacenter	20	
Loewe BluTech Vision 3D	21	VIDEO
HDMI CEC mode	22	
Loewe AudioVision	24	
Loewe Individual Sound Projector ID	25	
Apple IR codes	26	
Apple IR codes (Apple TV-2G)	27	STB
Loewe Soundbox	28	
Loewe SoundVision	29	
Loewe AirSpeaker	30	
Loewe Soundport	31	
Loewe MediaVision 3D	35	
Restore defaults	99	
klang bar mr3/mr5	36	
klang s1/s3	37	
klang mr1/mr3/mr5	38	

■ The codes shown here only apply to direct operation of the auxiliary device device

■ The available codes may vary depending on the status of the firmware in the remote control

■ The factory setting of the device keys can vary depending on the firmware version of the remote control

Device-specific key assignment

Key	Function	Loewe Device
	Favourite	klang s1/s3
	Input	klang bar3/5 mr, klang mr
	Night mode	klang bar3/5 mr, klang mr
	Snooze	klang s1/s3
	Surround	klang bar3/5 mr, klang mr
	Home	klang s1/s3
	Audio mode	klang bar3/5 mr, klang mr, klang s1/s3
	Treble -	klang bar3/5 mr, klang mr
	Treble +	klang bar3/5 mr, klang mr
	Bass -	klang bar3/5 mr, klang mr
	Bass +	klang bar3/5 mr, klang mr

DEVICE : SAT

PHILIPS	003 033 037 051 067 077 128 144 156 161 169 171 172 176 180 187 188 191 204 211 218 329 345 124 057 058 303
PHOENIX	054 077
PHONOTREND	059 133 168 212
PIONEER	128 191 211
PIXX	255
PLANET	213
POLSAT	110
POLYTRON	047 135
PREDKI	017 094
PREISNER	047 103 163 169 175 186 199 222
PREMIERE	191 211 214 007 059 133
PROMAX	067
PROSAT	168 170
PROSONIC	165
PROTEK	225
PROVISAT	201
PROVISION	179
PROXIMUS	330 334
PSI	132
PVP STEREO VISUAL MATRIX	341
PYE	003
PYXIS	208 210
QUADRAL	168 169 170 171 172 226
QUELLE	090 164 165
QUEST	354
QUIERO	110
RADIOLA	033 037
RADIX	047 137 216
RAINBOW	137 180
RC	138 104
RED STAR	226
REDPOINT	223
REDSTAR	226
RFT	033 037 161 168
ROADSTAR	060
ROVER	060 170
SABA	077 161 164 171 172 179 201 217
SABRE	067
SAGEM	205 329 108 105 061 062
SAGEMCOM	106 105
SAKURA	054
SALORA	021 130
SAMSUNG	017 080 127 211 243 043 313 124 064 062 308 309 311 052
SAT	006 071 127
SAT PARTNER	017 094 133 179 180 193 201
SAT TEAM	060
SATCOM	013 164 197
SATEC	060 077
SATECO	017
SATELCO	226
SATFORD	013
SATLINE	170

DEVICE : SAT

SATMASTER	013
SATPARTNER	017 094 133 179 180 193 201
SATSTATION	151
SAVA	077 161 164 171 172 179 201 217
SCHACKE	180
SCHNEIDER	171 172 218
SCHWAIGER	077 135 161 164 169 197 217 255
SCIENTIFIC ATLANTA	352
SEDEA-ELECTRONIQUE	017 162 065
SEEMANN	047 104 175 223
SEG	017 094 165 178 197 226
SELECO	059 213
SEPTIMO	151 154
SERVIMAT	066 070 072
SERVI SAT	059
SIEMENS	090 176 199 073
SILVA	193
SINTRACK	013
SKANTIN	060
SKARDIN	223
SKINSAT	006
SKR	060
SKY	149 159 034 050 189 227 001 042 064 018 025
SKY MASTER	060 133 168 170 197
SKY PLUS	002
SKYLAB	051
SKYMAX	033
SKYSAT	197
SKYVISION	059
SL	161 165 175 186
SM ELECTRONIC	060
SMART	186
SONY	067 211 227
SR	222
STARCOM	132 150
STARLAND	060 074
STARRING	094
STARSAT	080
STRONG	017 179 180 186 196 211 226 235 075
STV	014
STVI	014 137
SUMIDA	175
SUNNY SOUND	226
SUNSAT	060 223
SUNSTAR	163 175 186 222 226
SUPERCABLE	343
SUPERNOVA	189
SWISSCOM	328 114
TAGRA	059
TANDBERG	008
TANDY	122
TANTEC	067
TATUNG	067